



## DRIVESHAFT TUNNEL BRACE


DTB004 – 2008-PRESENT PONTIAC G8

### Tools required:

- 3/8" drive ratchet
- 15mm socket

### Installation:

1. Lift the vehicle high enough to gain access to the driveshaft tunnel area. Support with jack stands.
2. Using the 15mm socket, remove the four bolts holding the OE tunnel brace in place. Remove brace.
3. Position the BMR tunnel brace into place and re-install the OE bolts.
4. Torque bolts to 48 ft/lbs.
5. Lower vehicle.

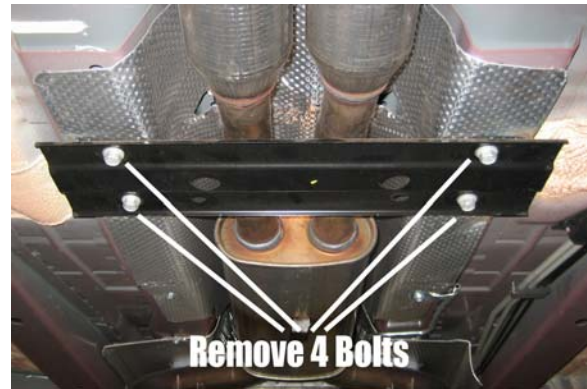

*Above image shown with optional BMR subframe connectors installed.*

*This product is an aftermarket accessory and not designed by the vehicles manufacturer for use on this vehicle. As such, Buyer assumes all risk of any caused to the vehicle/person during installation or use of this product.*